



# LOGIC T10B

**10" HD WI-FI TABLET**

**Quick Start Guide**

Please read carefully before using

# Table of Contents

<b>THANK YOU .....</b>	<b>3</b>	<b>CONNECTING TO THE INTERNET .....</b>	<b>19</b>
Features .....	4	Requirements .....	19
<b>GETTING TO KNOW YOUR T10B TABLET ..</b>	<b>5</b>	Connect to a Wi-Fi Network.....	20
About the Touchscreen .....	8	<b>BROWSING THE WEB .....</b>	<b>22</b>
LCD Screen Film .....	8	<b>OPTIONAL CONNECTIONS .....</b>	<b>26</b>
Touchscreen Actions .....	8	Connecting to a Computer.....	26
About the Orientation Sensor.....	9	Connecting Headphones .....	27
Charging the Tablet .....	10	Using the USB Full-Size Adapter.....	28
Inserting a Memory Card .....	10	Connecting a Keyboard.....	28
Resetting the Tablet.....	11	Connecting a Storage Device .....	28
<b>GETTING STARTED .....</b>	<b>12</b>	<b>SETTING THE SYSTEM OPTIONS.....</b>	<b>29</b>
Turning the Tablet On and Off .....	12	<b>SPECIFICATIONS .....</b>	<b>30</b>
Turning the Screen On and Off (Standby) .....	13	<b>WARRANTY .....</b>	<b>31</b>
Unlocking the Screen .....	13		
Home Screen at a Glance .....	14		
About Applications .....	15		
Preinstalled Applications.....	16		
Installing Applications .....	17		
About Widgets .....	17		
About Notifications .....	18		

# Thank You

Congratulations on purchasing your Logic T10B Tablet. This guide is provided to help you get quickly started with your tablet. Please read it carefully and save it for future reference.

 
## Features

- ④ Browse the Web  
Visit your favorite websites
- ④ Check your e-mail  
Keep in touch with friends and family
- ④ Watch YouTube™ videos  
Browse the world's most popular video sharing community
- ④ Read your favorite books  
Download thousands of books with the included E-book reader \*
- ④ Discover thousands of apps for Android™  
Games, applications and more with the installed marketplace
- ④ Connect to the Internet wirelessly  
High-speed Wi-Fi 802.11 b/g/n networking
- ④ Enjoy your media library anywhere  
Portable powerhouse plays popular music, video and photo formats
- ④ MicroSD memory card reader  
Increase your storage capacity (up to 32 GB supported).
- ④ Built-in camera  
Convenient front-facing camera
- ④ Automatic orientation detection  
Read any way you want; the display adjusts automatically!  
  
Reading books in the ePub format requires the included E-book reader application.


# Getting to Know Your Tablet

## Unit at a Glance


Name		Description
1	Camera	Front Camera

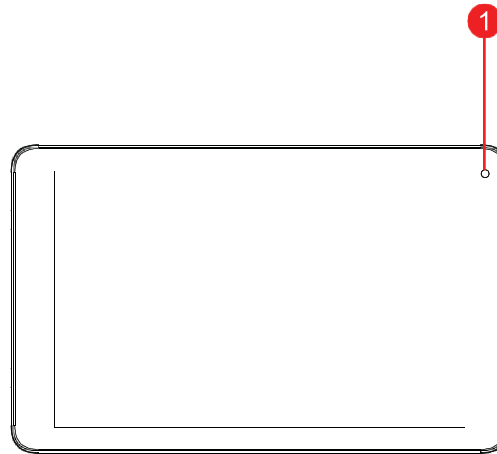

Name		Description
2	Power Key	Presstopower on the tablet, or to turn the screen on and off.
3	Volume + key	Press to increase the volume level.
4	Volume -key	Press to decrease the volume level.
5	USB Host	Connect a storage device to the tablet, or connect the USB charger.
6	Headphone jack	Audio output connection for headphones.
7	SD Card Slot	LoadexternalmicroSDmemory cards here.
8	MIC	Receiving sound forrecording
9	HDMI jack	Connect to monitor for output high definition video via Mini HDMI.
10	Reset	Press to reset the tablet if it freezes or otherwise behaves abnormally. (Use a paperclip or other small object to gently press this key.)

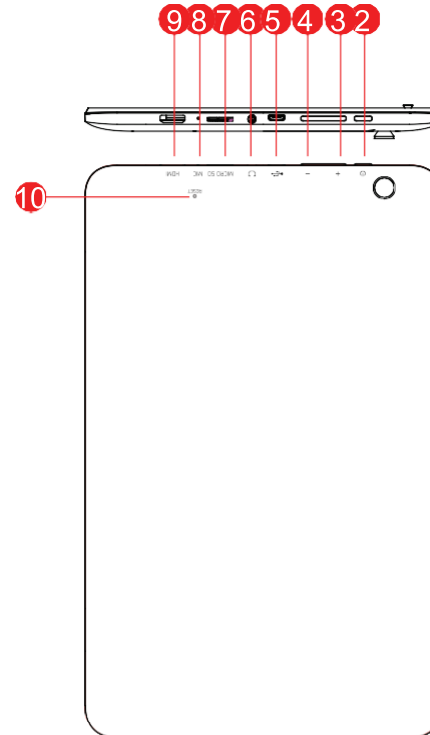 

Name		Description
11	Camera	Rear-facing camera
12	Speaker	Speaker output. When using the headphone jack they automatically mute.

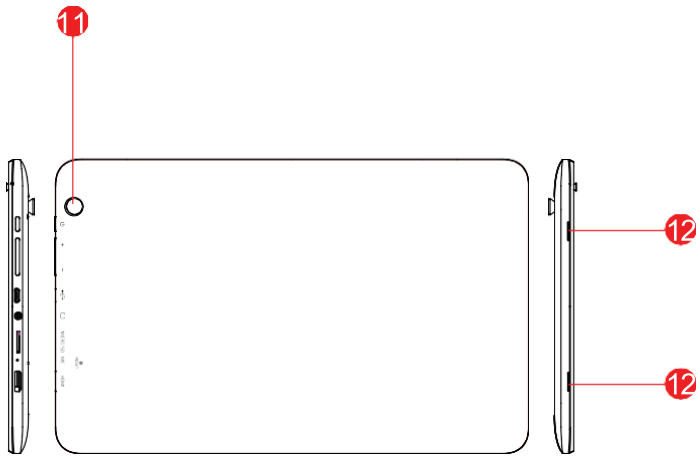 

## About the Touchscreen

Your tablet comes equipped with an easy-to-use touch-screen which allows access to the tablet's functions.

Use your fingertip to touch the area of the screen where a control icon is displayed. If you touch and hold the screen, it will register as a continuous button press.



*To avoid damaging the screen, do not touch it with excessive force or with any object other than your finger. For best response, make sure your hands are clean before using the touch- screen controls.*

### LCD Screen Film

A thin film has been applied to the touchscreen to protect it during shipping. This film should be removed before use. To remove it, simply take a corner of the film and peel it away from the screen.

### Touchscreen Actions

You can control the functions of the tablet by using the touchscreen in combination with the three touch keys located on the bezel. To control the tablet with the touchscreen, use your fingertip to manipulate icons,

Buttons, menu items, on-screen keyboard and other items displayed on the screen can be controlled using your fingertips with the following actions.

Touch:	To activate an on-screen item (e.g., application icons, buttons, menu items and the letter/symbols of the on-screen keyboard), simply touch it with your fingertip.
Touch and Hold:	Some on-screen items have an alternate action if you touch and hold it (e.g., opening an alternate menu or to activate the drag function). To touch and hold an item, touch the item and do not lift your fingertip until the action occurs.
Drag:	Drag an on-screen item to change its position (e.g., an application icon on the home screen). To drag an item, touch and hold it for a moment, then without lifting your fingertip, move your fingertip on the screen until the item reaches its target destination.



Swipe:	<p>Swipe up/down on the screen to scroll through a list. On some screens, you may be able to swipe left/right to change the view.</p> <p>To swipe, touch the screen and then quickly move your fingertip across the screen without lifting your fingertip. Do not pause on the screen with your fingertip at the initial point of contact or you may accidentally drag an item instead.</p>
Double-tap:	<p>Quickly tap the screen twice on a webpage or other application screen to zoom (the application must support the double-tap/zoom function). Within the browser, double-tapping a web-page section will cause the browser to zoom and fit that section to the width of the screen.</p>

## About the Orientation Sensor


The tablet contains a sensor that will automatically change the orientation of most screens as you rotate the tablet. The sensor works best when the tablet is rotated perpendicular to the ground (i.e., when the tablet is held upright and not flat on its back).




The orientation sensor can be turned on and off in the Display settings menu.

## Charging the Tablet

The current battery status will be always displayed in the top right of the screen in the system information bar.

The battery icon  will change in accordance with the battery status.

When connected to the charger, the status area on the top bar will display the  charging icon. Note the lightning symbol inside the battery icon.

### To charge the battery:

1. Plug one end of the included power adapter into an AC 100-240V outlet.
2. Plug the other end of the included power adapter into the power jack on the tablet.
3. Disconnect the power adapter when the tablet is fully charged.



*The battery used in this device may cause a fire or chemical burn if mistreated. Do not disassemble, incinerate or heat the device. Do not leave the device in direct sunlight or in a car with its windows closed. Do not connect the device to a power source other than that which is indicated here or on the label, as this may result in a fire or electric shock.*

## Inserting a Memory Card

This tablet accepts microSD memory cards. Insert a memory card into the microSD card slot to:

- ➊ Increase the memory capacity of your tablet
- ➋ Play media files stored on the memory card such as music, video or photo files.

To insert a memory card:

1. Align the memory card with the card slot. The metal contacts of the memory card must face down and towards the LCD screen.
2. Slide the card into the spring-loaded slot. Push the card in until it clicks into place



 
*Do not attempt to insert objects other than a microSD memory card into the card slot. A compatible memory card should fit easily into the card slot. If you encounter resistance, check the alignment of the card. Do not attempt to force the card in.*

*Avoid touching the gold contacts of the memory card.*

## To release and remove a memory card:

### 1. UNMOUNT the memory card.

- a. In the home screen, tap the Launcher Tab and then touch Settings to show the settings menu.
- b. Touch Storage to show the storage settings.
- c. Touch Unmount SD card to prepare the memory card for safe removal.

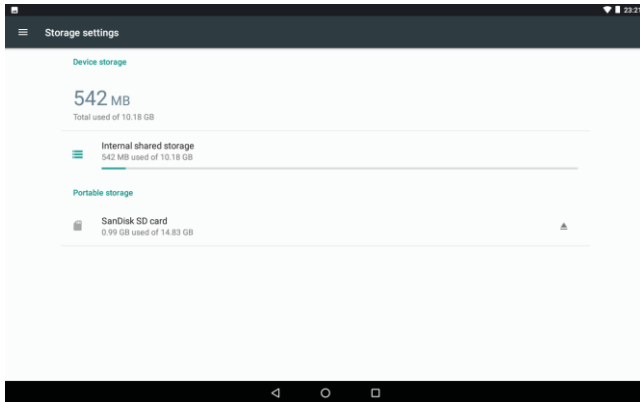

2. Push the card further into the slot until you hear a click. The card will spring out of the slot.

3. Grasp the card by its edge to remove it.



*To avoid damage and data corruption, do not remove a memory card while data is being written to or read from the card. For example, do not remove a card while playing a music file stored on the card.*

## Resetting the Tablet

Reset the tablet if it were to freeze and does not respond or otherwise malfunctions.

1. Disconnect your tablet if it is connected to a computer.
2. Push and hold down the power button until the tablet powers off. Then push the power button one more time to restart the tablet.

# Getting Started

## Turning the Tablet on and off

 
To turn on the tablet:

Press and hold the Power key until the LCD screen turns on. Wait until the Home screen appears; the tablet is now ready for use.

To turn off the tablet:

1. Press and hold the Power key until the confirmation message appears.

2. Touch OK to turn off the tablet.

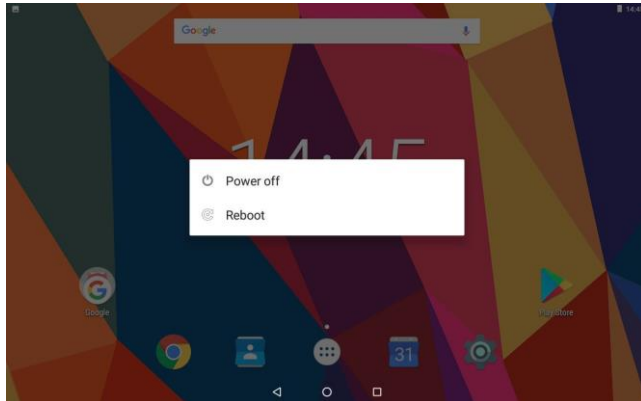

## Turning the Screen On and Off (Standby)

When the tablet is on, you can turn off the screen to conserve battery power. Simply press the Power key once to turn the screen off. Press the Power key again to turn the screen back on.



*To conserve battery power, the screen can be set to turn off automatically when the tablet is not in use (between 15 seconds and 30 minutes). This Sleep option can be found in the Display menu.*

 
## Unlocking the Screen

When the screen turns off, you will have to unlock the screen when you turn it back on.

To unlock the screen, touch and drag quickly the Lock Icon to the upward edge.




If a password has been set, enter the password to finish unlocking the screen. The Screen Unlock password can be set in the Security settings menu.

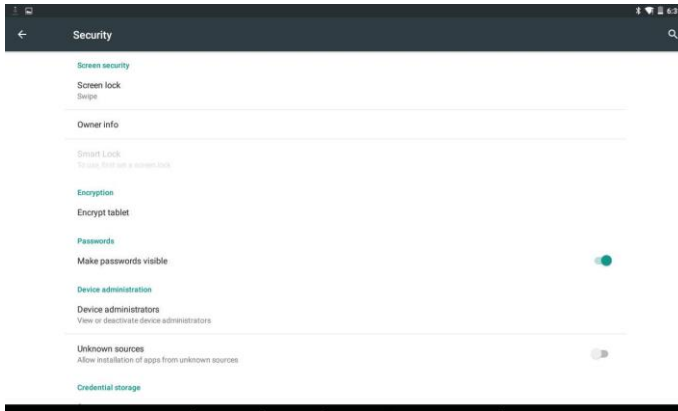

**WARNING:** Please write down your password/pin/lock pattern. Misplacing or forgetting this will lock the user out. Recovering the unit will reset the device back to factory defaults. **ALL YOUR DATA & PROGRAMS WILL BE LOST.**

## Home Screen at a Glance

 The Home Screen is the starting point for all of the features of your tablet.

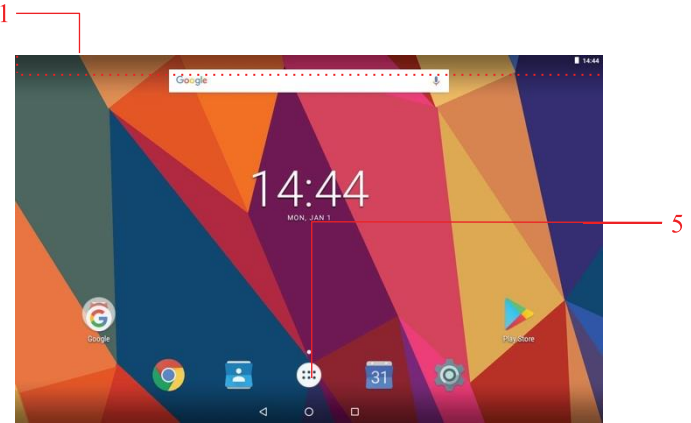

2 3 4


Name		Description
1	Notification Bar	Shows notification icons such as time, battery level and the network signal strength; touch the bar to open the full Notifications panel. Touch a Notification icon to display more detail.

Name		Description
2	Back	Touch to go back to the previous screen.
3	Home icon	Touch to go back to the central Home screen.
4	Recent Apps	Touch to display the list of thumbnail images of apps you have worked on recently. Touch an App to open it.
5	Launcher Tab	Open the Launcher to view the list of all Applications installed on the tablet. Touch the Launcher tab to open the Launcher.






## About Applications

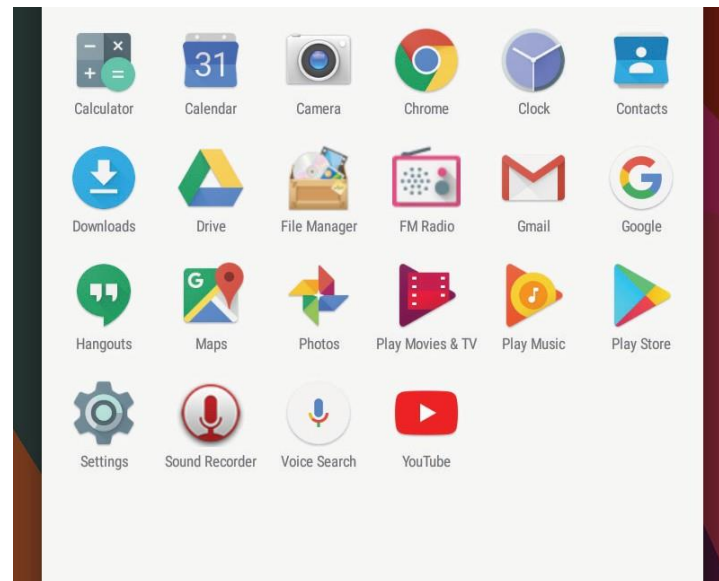 




To open an application, touch the application icon on the home screen or in the Launcher.

Launcher screen:



**Preinstalled Applications** Some applications have been installed on your tablet for your convenience. These applications include:

 <p>Chrome</p>	Browse the web.
 <p>Calendar</p>	Display the calendar or record events and appointments to manage your schedule.
 <p>Calculator</p>	Perform simple mathematical operations.
 <p>Camera</p>	Take pictures or videos with the front-facing camera.
 <p>Clock</p>	View the current time, or set an alarm.

 <p>File Manager</p>	View and manage files stored on the tablet.
 <p>Gmail</p>	Check your e-mail.
 <p>Photos</p>	View photos and videos, plus edit photos.
 <p>Settings</p>	Access the settings menu to adjust the tablet's options.
 <p>Play Music</p>	View videos.



## Installing Applications

You can also download and install additional applications from the play store, the web browser or other sources.

The tablet must be set to allow installation of applications from non-market sources. The unknown sources option can be set in the Application settings menu.

## About Widgets

Widgets are self-contained applications that you can place on the Home screens to access your favorite features.

### Adding Widgets to a Home Screen

1. Navigate to the Home screen on which you want to place the Widget.
2. Touch the Launcher Tab.
3. Touch WIDGETS to show all widgets and then hold on a widget icon to add it to the Home screen.

## Removing Widgets

 
Touch and hold the Widget until Remove icon appears at the top of the screen, then drag the Widget to the Remove icon to remove it.

## About Notifications

The icons that appear in the Notification bar at the bottom right corner of the screen alert you when new messages arrive or alarms or other application events occur.

View and respond to the notifications by opening the full Notifications panel.

- ④ Touch the Notification bar to open the Notifications panel.

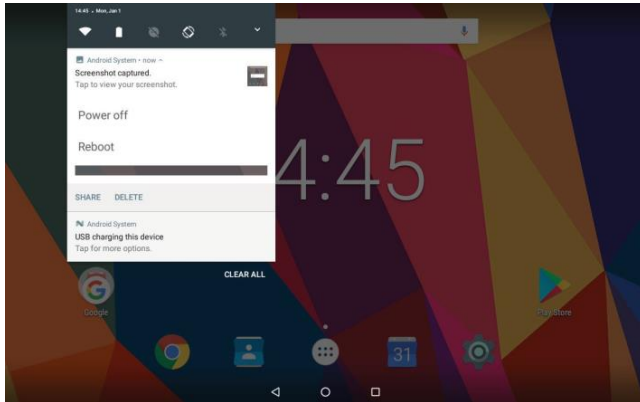

### To respond to a Notification:

Touch a notification in the list; the Notifications panel will close and the application associated with the notification will launch.

### To close the Notifications panel:

- ④ Touch any other area of the screen except the Notifications pane or;
- ④ Touch the Back icon.

# Connecting to the Internet

This tablet can utilize Wi-Fi data networks to connect to the Internet.

Wireless Wi-Fi technology can provide Internet access at distances of over 300 feet; however, this distance can be affected by your surrounding environment and Wi-Fi router.

## Requirements

In order to connect to the Internet, you will need either of the following:

### **A wireless router or access point with a broadband Internet connection**

The wireless router must support Wi-Fi 802.11b/g/n



*A minimum connection speed of 64 Kbps is recommended. Faster speeds will enable a better Internet experience.*

You will need to know the name of your network (SSID), as well as the password or other credentials if your network is secured. These settings can usually be found on the administration webpage of your wireless router.

connections. If the router supports 802.11n, make sure that it has been configured to accept 802.11b/g/n connections as well.


*Please refer to your wireless router's documentation for help, or ask your network administrator for details*



 
*You may encounter open Wi-Fi networks, or "hot spots." These networks are usually configured so that you can simply connect to them without needing to know its settings; the tablet will obtain all the information it needs from the router automatically.*

## Connect to a Wi-Fi network

The Notification bar displays icons that indicate your tablet's Wi-Fi status.

	Connected to a Wi-Fi network (waves indicate connection strength).
[no icon]	There are no Wi-Fi networks in range, or the Wi-Fi radio is off.

1. **Turn on the Wi-Fi radio if it is not already on. To turn on Wi-Fi:**
  - a. Go to the Home screen:  
Touch the Home icon.
  - b. Open the Launcher screen:  
Touch the Launcher Tab, then touch Settings.
  - c. Open the Wireless & Networks menu:  
Touch WIRELESS & NETWORKS.
  - d. Open the Wi-Fi settings menu:  
Touch Wi-Fi.
  - e. Make sure that the Wi-Fi option box is set to ON.  
Touch and slide the block to the right to enable the Wi-Fi connection.

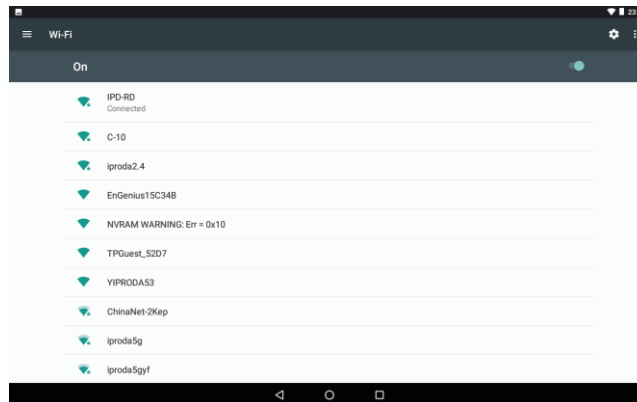

When Wi-Fi is on, the tablet will look for and display a list of available Wi-Fi networks.



*If a network that you have connected to previously is found, the tablet will connect to it.*

*If you don't see your network in the list, you can force the tablet to re-scan. To scan for networks, tap the SCAN icon located on the top right corner of the screen.*

2. **Select an available Wi-Fi network to connect to:**  
In the same Wi-Fi settings menu above, touch a network in the list.